



SAFETY TIPS AND WARNINGS

GENERAL WARNINGS

THE YAKINIKU® GRILL GETS EXTREMELY HOT! Do not move the grill during use.

KEEP CHILDREN AND PETS AWAY FROM THE YAKINIKU® GRILL.

DO NOT USE METHYLATED SPIRITS, PETROL OR OTHER FLAMMABLE LIQUIDS TO LIGHT (OR RE-LIGHT) YOUR GRILL! Only use detonators that comply with EN 1860-3!

DO NOT USE YOUR YAKINIKU® GRILL IN CONFINED SPACES OR INDOORS. For example in a house, garage, tent, caravan, vehicle or small room. This grill is designed for outdoor use in a well-ventilated area and is not and should never be used as a heating appliance. When used indoors or in an enclosed space, toxic fumes such as carbon monoxide accumulate and can cause serious personal injury or death.

DO NOT USE YOUR YAKINIKU® GRILL UNDER A HIGHER FLAMMABLE CONSTRUCTION. Such as garlands/decorations, low wooden canopy, light strings, etc.

THE YAKINIKU® IS GRILL IS NOT INTENDED FOR INSTALLATION IN OR ON CAMPERS AND/OR BOATS.

DO NOT USE YOUR YAKINIKU® GRILL WITHIN 1½ METRES OF FLAMMABLE MATERIALS. Flammable materials include, but are not limited to, wood or pretreated wood decks, patios and verandas.

KEEP ELECTRICAL WIRES AND CORDS AWAY FROM THE HOT SURFACES OF THE GRILL.

KEEP THE KAMADO AWAY FROM PLACES WITH A LOT OF FOOT TRAFFIC.

USE YOUR YAKINIKU® GRILL ONLY AFTER ALL PARTS HAVE BEEN ASSEMBLED. The grill must be fitted correctly in accordance with the assembly instructions. Incorrect assembly may be dangerous. If in doubt, please contact YAKINIKU® customer service: +31 (0)88 688 0600.

BE CAREFUL WITH THE USE OF MEDICINES AND ALCOHOL. The use of alcohol or prescription or non-prescription drugs may affect the user's ability to properly assemble or safely use the grill.

ALWAYS KEEP THE GRILL ON A SAFE AND LEVEL SURFACE.

DO NOT GRILL IN STRONG WINDS.

DO NOT WEAR LOOSE-FITTING CLOTHING WHEN LIGHTING AND USING YOUR YAKINIKU® GRILL.

NEVER USE PETROL, ALCOHOL OR OTHER HIGHLY VOLATILE SUBSTANCES TO LIGHT CHARCOAL.

NEVER ADD CHARCOAL-LIGHTING LIQUID OR CHARCOAL SOAKED IN LIGHTER FLUID TO HOT OR WARM CHARCOAL.

KEEP THE KAMADO AWAY FROM LIGHTER FLUIDS, PETROL AND ALCOHOL. The area around the grill must be free of flammable vapours and liquids.

DO NOT USE WATER TO SUPPRESS FLAMES OR EXTINGUISH CHARCOAL.

NEVER DISPOSE OF HOT CHARCOAL IN A PLACE WHERE IT MAY CONSTITUTE A FIRE HAZARD OR SOMEONE MAY WALK ON IT.

NEVER THROW AWAY THE ASHES OR CHARCOAL BEFORE THEY ARE COMPLETELY EXTINGUISHED.

DO NOT REMOVE THE ASHES UNTIL ALL CHARCOAL HAS BEEN BURNT AND COMPLETELY EXTINGUISHED AND THE GRILL HAS COOLED DOWN.

DO NOT MOVE OR STORE YOUR YAKINIKU® GRILL UNTIL THE ASH AND CHARCOAL ARE COMPLETELY EXTINGUISHED.

NEVER TOUCH THE GRILL OR CHARCOAL GRATE, ASH, CHARCOAL OR GRILL TO CHECK IF THEY ARE HOT.

USE APPROPRIATE TOOLS WITH LONG, HEAT-RESISTANT HANDLES.

GRILL BRUSHES SHOULD BE CHECKED REGULARLY FOR LOOSE THREADS AND EXCESSIVE WEAR. Replace the brush if you find loose threads on the cooking grid or on the brush. YAKINIKU® recommends getting a new stainless steel grill brush at the beginning of each spring.

ALWAYS BE ALERT! Property or product damage, hazards or dangerous behaviour can lead to serious injury or even death.

YAKINIKU® KAMADO

NEVER USE YOUR YAKINIKU® KAMADO WITHOUT AN INSTALLED ASH PAN.

ALWAYS EXTINGUISH THE CHARCOAL AFTER GRILLING ON YOUR YAKINIKU® KAMADO. Close the lid of your Kamado, the ventilation openings of the daisy wheel on top and the ventilation slider at the bottom.

USE HEAT-RESISTANT BARBECUE MITTENS OR GLOVES when grilling, adjusting the vents, adding charcoal and using the thermometer or opening the lid.

DO NOT LEAN ON THE SIDE TABLES OR OVERLOAD THEIR ENDS.

ALWAYS PLACE CHARCOAL ON TOP OF THE (LOWER) CHARCOAL GRID. Do not place charcoal directly at the bottom of the Kamado.

NEVER COVER THE INSIDE OF THE KAMADO WITH ALUMINIUM FOIL to catch dripping fat, as this obstructs air flow. Use a drip pan instead.

DO NOT REMOVE THE (FIBRE GLASS) FELT FROM THE EDGE OF THE KAMADO OR THE EDGE OF THE LID. This felt edge ensures a good seal.

REGULARLY OIL THE HINGES AND BOLTS OF THE METAL BANDS WITH A LIGHT MACHINE OIL SILICONE SPRAY. All bolts and nuts must be checked regularly and tightened if necessary.

YAKINIKU® SHICHIRIN

AFTER USE, STORE THE YAKINIKU® SHICHIRIN IN A DRY PLACE.

THE YAKINIKU® SHICHIRIN CAN CAUSE DAMAGE TO A PIECE OF FURNITURE, therefore always place the Shichirin on the bamboo shelf.

YAKINIKU® OUTDOOR KITCHEN

Due to its weight, it is recommended that you unpack and install the outdoor kitchen with two people. In addition, it is best to place a carpet/ rug under the product during installation. This prevents scratches on the lacquer that can be caused by a rough hard surface.

In case of deep damage to the lacquer, the product may develop signs of corrosion. Be careful not to damage the product when installing the outdoor kitchen. During installation, most damage may occur to the coating.

After installation, place the outdoor kitchen only on hard, stable surfaces and level it using the leveling feet and a spirit level.

YAKINIKU® CAST IRON

MAINTENANCE: To protect your cast iron product and prevent rusting, it is important to remove any baking residue on your product immediately after use with warm/hot water. Wipe off the residue with a cloth, absorbent paper or a soft brush. You can also use coarse sea salt to remove stubborn residue. Do not use washing-up liquid. Dry your product well after cleaning. Afterwards, apply a natural care product to the heated cast iron to protect your product.

CAUTION!: Do not soak your cast-iron product in water. Cast iron products are not dishwasher safe. Store your cast iron products in a dry and cool place.

YAKINIKU® LEATHER

MAINTENANCE: You can easily remove stains from your leather product with a damp cloth. Never treat stains on your leather product with soap, as this degrades the leather and causes it to lose its properties. Certainly do not use corrosive agents, such as petrol or acetone. Make sure that stains cannot be absorbed for too long. We recommend treating leather products thoroughly with suitable leather care beforehand for better protection against dirt and liquids. Repeat this action every six months to maintain the leather properly.

CAUTION!: Leather products are not weatherproof. Make sure you keep your products moisture-free to ensure years of quality. If your product does get wet, let it dry at room temperature. Do not leave it in the sun or near a stove or heater. Do not seal the products from the air when storing them. Leather is a natural product and should be able to breathe.